
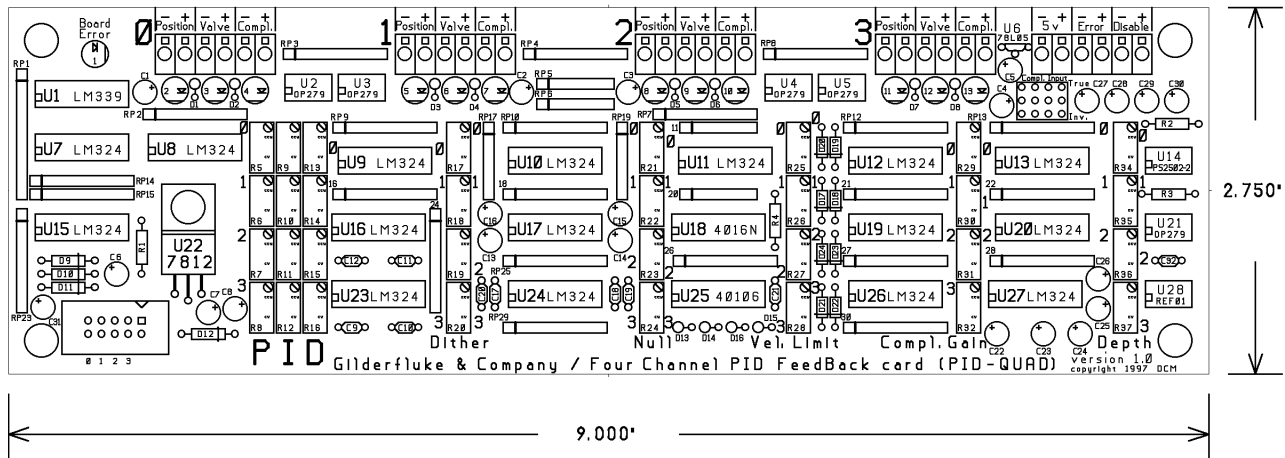


- OPERATING INSTRUCTIONS -
- for -
- EFB-QUAD ELECTRONIC FEEDBACK CONTROLLER -
- PID-QUAD ELECTRONIC FEEDBACK CONTROLLER -
- printed February 27, 2006 -

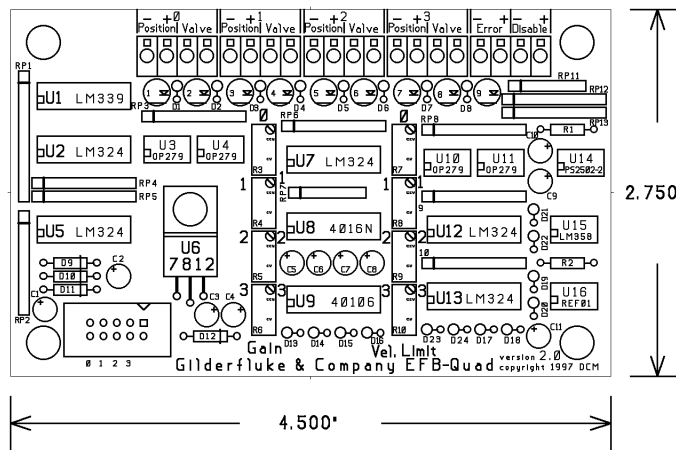

Animation movements come in two basic flavors: 1) Analog, and 2) Digital. Although we are used to thinking of everything 'digital' being superior to anything analog (like digital CDs vs. analog LP records), this is the one case where it just ain't so ¹. Analog movements are used in almost all high-end animated figures. They give you a fluid, lifelike motion that digitals just can't do.

¹ Digital electronics are used to create most analog Animation Control Systems.

A Digital control is either off or on, just like a light switch. A typical digital animation movement is at either one end of its travel or the other, or moving between these two positions². The speed of the action is set by the flow controls that control how fast the air (or oil) can get into and out of the cylinder.

An analog control is like the light dimmer on the wall of your dining room. It can be off, on, or at any point in between. The rate at which it is moving (within the maximum flow limitations of the valve) is controlled by how fast you are turning the knob. If you stop turning the knob half way through the rotation, the movement will stop there too. An analog movement will follow every nuance of how you turned that knob during programming and will be able to repeat it exactly. If something tries to push an analog away from where it was programmed to be, it will actually fight to get back to where it belongs.

How does it do this? Unlike open loop controls (digital movements are almost always open loops), the command signal to an analog movement does not control the valve directly. Instead, the command signal goes to some sort of Electronic Feed Back (EFB) card. Examples of these are our EFB-Quad, PID-Quad and BS-EFB. Here the command is compared with the actual position of the movement as measured by a device that is mounted on the movement (typically a potentiometer). If the movement is off by just a little, the EFB card will open the valve by just a little to get it back into the proper position. If the movement is off by a lot, then the EFB card will open the valve as needed until it starts getting close to where it should be. It then ramps the valve fully closed as the final position is reached to slow the movement smoothly to a stop.

Despite their added complexity, analog functions tend to be more reliable than digital moves. The reason for this is simple. Their closed servo loop allows them to adjust themselves (within limits) to compensate for cylinder wear, leakage and pressure variations. They are also smoother than digital functions. With less banging into the end stops of the cylinders, there is simply less wear and tear on the mechanics of the figure. The two most common failures in an analog movement are a break in the wires leading to the feedback pot on the cylinder or a clogged valve. A unique feature of all of our Electronic FeedBack cards is the ability to sense wire breaks, sound an alarm and to turn 'off' the affected axis until help arrives.

So why aren't analog moves used for all animation? One reason. Price. The cost of the cylinder and its associated hardware is virtually identical for an analog or digital movement. The analog function does need a bit more electronic control, but this no longer represents a major cost. The servo valve does. The cost of a solenoid valve for a digital function might be between \$20 and \$30. The cost for a servo valve to do the same movement as an analog would be in the \$500 to \$1000 range. In addition there needs to be some sort of 'feedback' on the cylinder to tell the EFB card where the movement is at

² There are variations in digital movements that use more than a single digital valve or cylinder. These allow some variation in speed and/or stopping mid stroke. With open loop controls, the repeatability can not be guaranteed as it can with an analog function. It is also possible to use a pair of four way valves or a single five way valve in a closed loop servo system. This will give you positional repeatability, but not the smoothness you get from a real ServoValve.

any given instant. When using a potentiometer, this can add from \$25 (for a rotary pot) to \$100 or more (for a linear pot or LVDT).

Electronic FeedBack cards typically use what is called a 'PID' loop to control the position of a movement. This type of loop is available on our new four channel PID-Quad and BS-EFB Electronic FeedBack cards. The 'P', 'I' and 'D' stand for Proportional, Integral and Derivative. Forget that. This is what they do:

The basic feedback loop is the Proportional (or 'gain'). It is what is found on the simple EFB cards like our EFB-Quad. A simple loop like this has been traditionally used for controlling most analog functions in animated figures. This is because most figures' positional requirements are not stringent enough to demand a higher performance feedback loop.

The 'P' function compares the desired position with the actual position (as measured by a potentiometer or other measuring device that is attached to the movement). The difference is amplified and fed to a servo valve to open or close it as needed. If the 'gain' of the 'P' is turned up too high, then the movement will overshoot, and then try to get back, and overshoot again, and again, and again..... This is what is known as oscillation, and it is not a good thing. If the gain is tuned too low, then the movement will follow the commands sluggishly.

The 'I' function is the one that is used to suck a movement in when it is too close to the desired position for the 'P' function to open the valve enough to overcome the 'stiction' of the cylinder. If the movement isn't perfectly positioned, the 'I' function generates a slowly rising voltage to the valve until it opens enough for the cylinder to move the last little bit to the desired position. If the 'I' function is turned up too high, then the movement will constantly seek the desired position, overshoot, and seek again. Unlike the oscillation that occurs when the 'P' is set too high, the 'I' oscillation occurs at a low speed. Although entertaining, it is rarely destructive. If the 'I' is adjusted too low, then the 'dead band' around the desired position will be wider.

The 'D' function is used so that you don't have to turn the 'P' up too high to get the movement to accurately follow fast changing commands. The 'D' gives an extra 'kick' to the valve when a movement is commanded to start quickly. If it is set too high, then the movement will start too quickly, overshoot the commanded position, and then slow down as the 'P' error takes over.

Another adjustment that is available on our EFB-Quad or PID-Quad cards is a 'Velocity Limit'. This control allows you to set the maximum a valve can be opened by the FeedBack card. On the EFB-Quad it allows you to set the gain a bit higher to control oscillations by limiting the maximum opening of the valve. By raising the gain higher and limiting the velocity, you can narrow the 'dead band' of the servo loop.

The PID-Quad also has adjustment to add a 60 Hz dither signal or offset (null) to the output. The dither is used with some valves whose performance is increased remarkably when such a signal is applied. The nulling allows you to center the spool of the valve electronically if it wasn't centered properly in the factory.

The PID-Quad also features what are called 'Compliance' inputs. This adds a second 'force' feedback to an analog movement. This is usually a strain gauge or accelerometer mounted on the cylinder in addition to the normal position sensor. This measures the force being applied by the cylinder and feeds this to the FeedBack card. Sometimes an accelerometer on the movement or differential pressure transducer on the valve are used for a lower cost.

As a compliant movement is commanded to accelerate quickly, the inertia of the mass of the movement applies a force to the strain gauge. This gets amplified and added to the signal that the PID-Quad sends to the valve to open it further than just the positional error would have made it open. Conversely, when the movement is commanded to decelerate quickly, the strain gauge picks up the mass of the movement in the opposite direction and the feedback card can open the valve in the reverse direction to apply active braking to the movement as it approaches its target position.

The other thing that compliance does to a figure is to 'soften' it. If you press on a compliant movement (one that uses a strain gauge), it will sense this external pressure and the feedback card will actually open the valve to allow the movement to move out of your way. In complex figures, as one movement applies forces to other movements, they will respond to this force and all give a little. Of course, using pneumatics instead of hydraulics gives this effect even without compliance feedback. With pneumatic figures, the compliance feedback can be reversed to make the figure act a little stiffer, or a little more like a hydraulic figure.

An EFB-Quad or PID-Quad controller is used to control up to four independent servo loops. Each of these loops consists of a servo valve or motor controller, an actuator (hydraulic or pneumatic cylinder or electric motor), and a transducer (typically a 10 Kohm variable resistor) linked to the actuator.

In operation, a control voltage (nominally 0 to 10 VDC) is sent to the EFB-Quad or PID-Quad controller. The card's circuitry compares this incoming voltage with the current position of the actuator as sensed by the transducer.


The most common failure in animated figures which use EFB analog movements are broken wires leading to the transducer. For that reason Gilderfluke's EFB-Quad and PID-Quad controller were designed so that they only need two wires to each transducer (three are usually required) and it constantly checks the status of these wires. If there is a wire break, it will immediately switch off that axis. When a break is sensed, or when power is first applied to the EFB-Quad or PID-Quad controller, it will stay in the error condition for approximately 10 seconds. This will keep circuits with loose wire connections from jumping in and out of error condition.

There is a 'broken wire' indicator LED for each of the four channels in the EFB-Quad or PID-Quad controller. If any of the circuits is in an error condition, then the 'error' LED will light. This error signal can be sent to a remote indicator or alarm through the optically isolated 'Error' output. A remotely mounted LED or small relay can be used to indicate a problem with the figure on a central indicator panel.

If any channels are left unused on the EFB-Quad or PID-Quad controller, you will need to short together the transducer inputs on the unused channels to turn the ERROR LED off.

Installation:

Connections for channel 0 output shown. All other channels are identical.

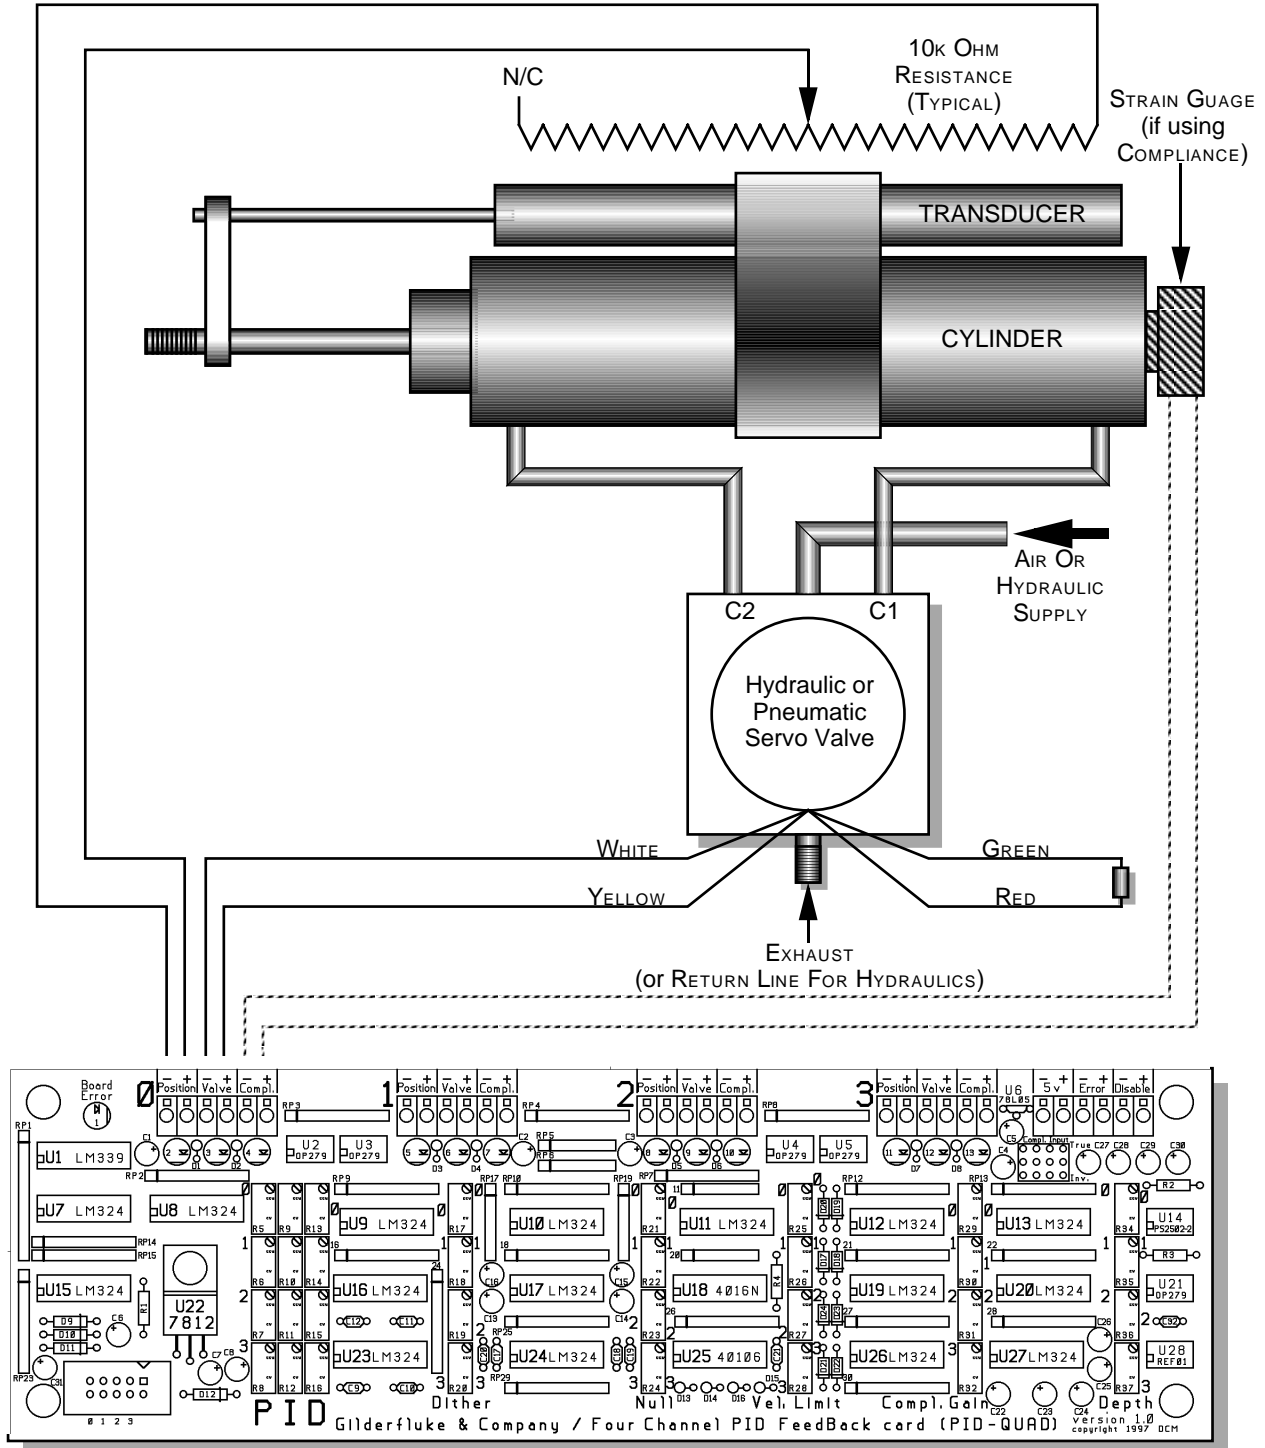

The cylinder can be virtually any type of double acting cylinder available (rotary, linear, etc.). The stroke and diameter of the cylinder can be used to determine the size of valve you need to use by

calculating the approximate displacement of the cylinder and comparing it to the cubic feet per minute (CFM) capacity of the valve.

A number of different styles of position transducers are available. These include standard linear and rotary potentiometers as well as 'string pots' in which a small steel cable extends to measure distances. Whatever type of transducer is used, it must be linked to the actuator so that it closely follows the movement and uses as much of its stroke as possible. For any permanent installation you must use a potentiometer which is made for this type of heavy duty use. Typical life span ratings are in the 2 to 20 million cycle range.

The default value for the feedback pots is 10 Kohms. You can use feedback pots which have a different value. To do so you will need to change the two SIP resistors RP1 and RP23 (RP2 on the EFB-QUAD) to match the value of your feedback pots. They are socketed to facilitate this. RP1 is a ten pin bussed SIP in which one end of all nine resistors are attached to pin number one. RP23 (RP2 on the EFB-QUAD) is an eight pin SIP resistor which contains four independent resistors. If you can't find a pair of SIP resistors with the appropriate values or need to use different values for different channels, you can also build them up from discrete resistors.

The input to the EFB card from the feedback pot is 0-5 volts, referenced to the negative reference found on the "-" feedback connection pin. You should measure this voltage across these two pins as the feedback element is moved. If you are using a feedback element other than a potentiometer (like a LVDT or Tempasonic transducer), this is the voltage that needs to be applied.

When the voltage at the feedback "+" pin exceeds 7.5 volts, this will trigger the 'wire break' circuit. This will immediately limit the output voltage swing to less than a volt, effectively turning off the axis. Whenever the feedback card senses a wire break, there is a ten second (or so) delay until the channel is turned back 'on'.

Any wire break will also turn on the 'Error' output. This can be used to turn on a remotely located indicator light or LED to alert the ride operators that there is a problem with this channel. The 'Error' outputs from multiple EFB cards can be paralleled to a single indicator. The Error output is an optoisolated (to 1500 volts) transistor, suitable for controlling loads of up to about 50 milliamperes at up to 24 volts.

All unused channels on an EFB card should have the feedback connections shorted together with a short piece of wire. This will allow the wire break circuitry for the channel to time out and turn off the 'Error' outputs.

If you are using a potentiometer and can't change the values of RP1 and RP23 (RP2 on the EFB-QUAD) to match (or your feedback pot doesn't work well as a voltage divider) you can tie the pot's unused side to a 5 volt reference on the feedback card. On the EFB-Quad, you can find a five volt reference on U15 pin #1. On a PID-Quad, the 5 volt reference can be found on U21, pin #1. When operating in this mode, you will need to clip RP1's pins #2, #3, #4 and/or #5 (for channels 0 through 3, respectively) so that they no longer make contact with the SIP socket. On the PID-QUAD there is a screw terminal with 5 volts on it. This is normally used to provide power to the strain gauge used for compliance feedback. Note that this 5 volts is not as accurate or clean as the 5 volts found on U21, but it can provide a good deal more current and is a lot easier to get to.

All four channels on an EFB card can be disabled by applying a 12 to 24 VDC signal to the 'Disable' screw terminals. This signal is optoisolated (to 5000 volts) from the rest of the feedback card. There will be a ten second (approximately) delay after this signal is removed before the feedback channels return to normal operation.

The output which goes to the valve is +/- 10 volts at a current up to 50 milliamperes. This is compatible with the 250 ohm coils on most servo valves.

EFB-Quad and PID-Quad Inputs:

The inputs to the EFB-Quad and PID-Quad are a standard 1/4 J6/A cables. This typically comes from a BS-ANA or other analog output control system. It is fed to the feedback card through the ten position ribbon cable connector.

The pinout for the 1/4 J6/A is as follows:

1	brown	circuit ground
2	red	15 to 24 VDC Power Supply
3	orange	Channel 3 Positive Analog Input
4	yellow	Channel 3 Negative Reference
5	green	Channel 2 Positive Analog Input
6	blue	Channel 2 Negative Reference
7	violet	Channel 1 Positive Analog Input
8	gray	Channel 1 Negative Reference
9	white	Channel 0 Positive Analog Input
10	black	Channel 0 Negative Reference

The 'positive analog inputs' are typically 0 to 10 VDC, referenced to the 'negative references'. This 'negative reference' is nominally at about 1 1/2 volts above the ground level, and is common for all four channels. This reference is provided by the analog outputs of all Gilderfluke & Company Animation Control Systems. If you are using these feedback cards with another control system, you will need to supply this reference voltage along with the 15 to 24 VDC supply. If the negative reference is attached to the real ground, the card will not operate properly.

EFB-Quad and PID-Quad Adjustments:

There are two adjustments available on each of the four channels on an EFB-Quad, and eight adjustments per channel on an PID-Quad. These are:

- 1) Proportional ('P') or Gain:** This controls how much the valve will be opened for a given distance between the commanded and actual positions of a movement. This control is bypassed when there is an error condition in the feedback transducer wiring or on power-up.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all.

When the Proportional control is turned too high, the movement will oscillate uncontrollably. Set it too low and the movement will move sluggishly.

- 2) Integral (PID-Quad only):** This is the control that sets the final 'suck in' to the commanded position. When a motion stops near the commanded position, but not exactly on it, the Integral comes into play. When the position error is small, the voltage sent to the valve is usually too small to overcome the valve/cylinder 'stiction' to get the movement to reach the final position. What the integral does is to provide a gradually increasing voltage to the valve until it overcomes the valve/cylinder stiction and the movement moves that last little bit to reach the final position.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all.

When the Integral on a movement is set too low, the movement will not reach the commanded position when the distance between the commanded position and the actual position is small. This will widen the deadband of the movement. If the Integral is turned too high, you will see the movement constantly 'seeking' the commanded position. This looks like a low speed oscillation on the movement.

- 3) Derivative (PID-Quad only):** This controls the PID feedback loop's ability to respond to quickly changing commands. Think of the derivative as the accelerator pump in an automobiles' carburetor. When you step on the gas quickly, it gives an extra little squirt of gas to the engine to get it to accelerate quickly. When you accelerate slowly, the accelerator pump (and the Derivative term of the PID loop) have no effect.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all.

The Proportional (Gain) control and the Derivative must be adjusted interactively. When the Derivative is set too low, the movement won't follow fast changes in commands as quickly as it would otherwise. If the Derivative is set too high, then the movement may start quite quickly, but then get ahead of the commanded position and will have to decelerate to allow the Proportional term to catch it.

- 4) Dither (PID-Quad only):** This control adds an approximately 60 Hertz 'triangular' signal to the output sent to the valve. Some valves can benefit from such a signal in that by keeping moving, they will then respond to actual commands much more quickly.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all.

If the valve you are using will benefit from a dither signal, the specification sheet will usually indicate this. If there is no indication whether a dither signal will help your valve, adjust the movement as usual, but keep it a little more sluggish than you want the final speed. Then crank in some dither. If the speed of the movement increases, then there is probably some benefit to keep it in. If there is no change, then there is no reason to use it.

- 5) Null (PID-Quad only):** Nulling is used to set the valve so that when it has no voltage being sent to it, there is no movement in the cylinder.

Ideally the valve should be adjusted mechanically with the wires from the feedback card

completely disconnected. Most valves have some sort of setscrews or other mechanical adjustments which will allow you to center the valve until there is no movement in the cylinder. If you can't disconnect the valve from the feedback card, you can attach a voltmeter across the valve outputs and position the movement until it stays at mid-stroke. Then mechanically adjust the valve until the voltmeter reads zero volts.

The Null control on the PID-Quad is used to center valves that can not be adjusted mechanically. It can also be used to offset movements that are so heavily loaded in one direction that they move more slowly in one direction than the other.

The null control must be set to provide zero volts before any of the other controls have been set. To do this, turn the P, I, D and Dither controls fully counter clockwise. Attach a meter across the valve outputs for the channel being adjusted. Adjust the Null control until the meter reads zero volts.

If your valve needs to be nulled electronically, then attach the valve and apply air or hydraulic pressure. Adjust the Null control until the cylinder stays stationary (or nearly stationary).

- 6) Velocity Limit:** This control limits the maximum amount the valve may open by limiting the voltage that is sent to the valve.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all.

The Velocity control can be used to limit the speed of a movement by limiting the voltage that can be sent to the valve. This has the same effect as electronically reducing the size of the valve. You may want to limit the velocity of a movement for safety reasons (as when you just don't want a movement to move too fast), or by limiting the velocity of a movement, you may be able to increase the gain of the movement to a point higher than you otherwise could. This can give you a movement that follows the commanded position more sharply, albeit more slowly at maximum speed.

- 7) Compliance Gain (PID-Quad only):** This sets the gain of the compliance input. It is adjusted interactively with the Compliance Depth control.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all. This should be done to turn off the compliance if it is not being used.

- 8) Compliance Depth (PID-Quad only):** This sets the length of time that a compliance input will have an effect on the output. Increasing the Compliance depth will not only affect the length of time that it has an effect, it will also increase the amount of effect that it has. It is adjusted interactively with the Compliance Gain control.

Turning this control clockwise will increase its effect. Turning it counterclockwise reduces its effect. When turned fully counter clockwise, it has no effect at all. This should be done to turn off the compliance if it is not being used.

A green/red bicolor LED shows the compliance inputs and their effect on the outputs. A compliance input is usually attached to a strain gauge or accelerometer. Voltage input ranges that are acceptable are 0-5 or 0-10 volts. When the compliance input has a changing signal applied to it, it will have a momentary effect on the output. This will then fade away over time until it has no more effect. The amount of time the input effect takes to fade away is set using the Compliance Depth control. The Compliance Depth and Compliance Gain both have an effect on how much of an effect the compliance input has on the output.

When installing a compliance feedback element (either a strain gauge or accelerometer), you have a 50%/50% chance of installing it backwards. The effect of the compliance inputs can be reversed by moving the jumpers labeled 'compliance inputs'. The jumpers can be moved to either the 'true' or 'inverted' positions as needed.

EFB-Quad Adjustment:

Adjusting an EFB movement is part skill and part art. Unfortunately it must be done to taste, so there are no set rules about making these adjustments. The following procedure will usually yield satisfactory results³:

- 1) When you first turn on a EFB circuit to start testing it, you should first turn the Proportional (Gain) controls all the way down (counter-clockwise) and the velocity control all the way out (counter-clockwise).
- 2) Turn the Proportional (Gain) control clockwise as you apply a varying command voltage to the movement to sweep it back and forth. As the gain comes up, you will start to see the valve indicator LEDs start to glow green/red as the valve opens and the actuator starts to follow the position commands. Continue turning the Proportional (Gain) up until the movement starts to show signs of oscillation.
- 3) Turn velocity control clockwise to stop the oscillation. Now turn it back down (counter-clockwise) until you find the point just above where the movement can be made oscillate by applying fast moving command voltages.

At this point the movement should be adjusted reasonably well. Depending on the nature of the movement, you may want to continue to tweak it to taste.

PID-Quad Adjustment:

Before adjusting a PID-Quad, you should first set all of the controls for the channel fully counter clockwise. Then adjust the Null control for zero voltage output measured on the valve outputs. This should be somewhere near the center of the range of this potentiometer. You should then null the valve mechanically or electronically, as needed.

The basic adjustment is performed pretty much as on the EFB-Quad. If when the Proportional gain is first turned up the movement tends to slam to one end or the other, then there is probably a phase reversal problem. This can be corrected by either reversing the two wires that lead to the valve, or switching the wire that runs to one end of the feedback pot to the other end of the feedback pot. Do not move the wire on the wiper of the pot or just reverse the two wires that run to the feedback card, as this will have no effect.

After the basic adjustment is made, you can then start cranking in some Integral and Derivative. As these are added, you may find that the Proportional and Velocity Limit controls may need to be adjusted higher or lower.


If you are using a compliance input, you will need to start by adjusting in some of the Compliance Gain and Compliance Depth. If the compliance input needs to be reversed, you will find that the movement will start oscillating or fight you as you press against the movement (if you are using a strain gauge for the compliance feedback). Normally when you press against a compliant movement that uses a strain gauge, it will momentarily move in the same direction you are pushing on it. As the Compliance Depth times out, only then will it begin fighting to get back to the commanded position.

³ If this is the first time the circuit has been turned on, you may find that the movement turns the valve on hard in one direction and just wants to stay there. This means that there is something crossed in the EFB's hookup. To correct this problem you will need to reverse the connections at one and only one of the following points:

- 1) Switch the wiring on the transducer. One of the two wires to the transducer is attached to the wiper. Leave this one alone. The other wire is attached to one end of the resistor. Move this wire to the opposite end of the resistor (this would be the connection marked 'N/C' on the illustration).
- 2) Switch the two wires on the valve. If the valve is opening in the wrong direction, reversing the two wires to the valve will reverse the direction the valve opens.
- 3) Switch the plumbing between the valve and the cylinder. Just cross the two hoses at either the valve or cylinder end of the hookup.

Quad D/A and EFB (“George Board”):

This board combines the functions of a Quad D/A converter and a Quad EFB. The adjustments are a combination of those you would find on both of these other products. The only function which was eliminated is the ‘low gain’ control on the EFB. When a transducer wire break occurs, the gain will immediately go to its lowest possible value, effectively shutting off the valve. The valve and transducer connections, indicator LEDs, and adjustments are arranged as follows.

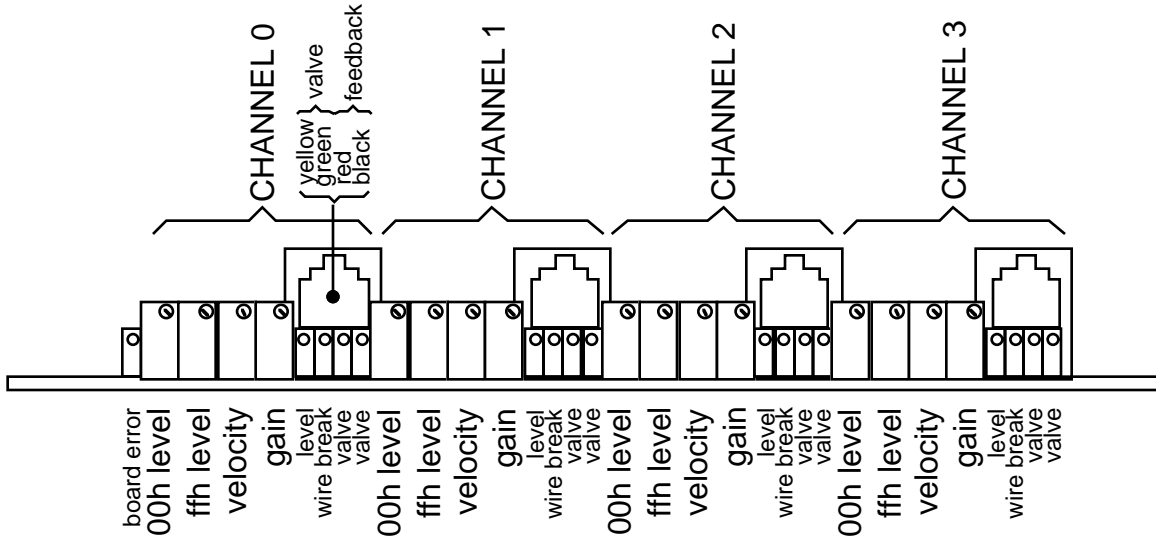

As with the regular EFB-Quad or PID-Quad controller, the wire break error signal from all four channels is summed to a single indicator LED and output. This is a optoisolated transistor output on pins 4 (collector) and 6 (emitter) of the backplane connector. This output can drive a LED, solid state relay, or small electromechanical relay. There is also a four pin jumper header, which when two jumpers are installed horizontally will bring these same signals out to pins 1(collector) and 6 (emitter) on the backplane. These connect to the white and blue wires on the backplane’s RJ-11, which are unused if the rest of the cage is populated with other Quad D/A&EFB boards or dumb bricks, but which is incompatible with any smart bricks in the cage. These jumpers are normally left off.

Note: The Wire Break Collector & Emitter are the 2 wires used by the George Board to transmit remote wire break indication. If you do not need this feature you can isolate the George board from the back plane by removing the 2 jumpers located near edge pin #1.

Caution: Never connect edge pins 1 & 2 of a George Board to edge pins 1 & 2 of a brick card unless the 2 jumpers near edge pin 1 are removed.

wire #	Edge pin #	color	wire function
J8 Black	1	N/A	Wire Break Collector
J8 White	2	N/A	Wire Break Emitter
	3	N/A	
	4	N/A	
	5	N/A	
	6	N/A	
	7	N/A	
	8	N/A	
	9	N/A	
	10	N/A	
#1	11	brown	J6 out channel 0 Ground
#2	12	red	J6 out channel 0 bit 7
#3	13	orange	J6 out channel 0 bit 6
#4	14	yellow	J6 out channel 0 bit 5

#5	15	green	J6 out channel 0 bit 4
#6	16	blue	J6 out channel 0 bit 3
#7	17	violet	J6 out channel 0 bit 2
#8	18	gray	J6 out channel 0 bit 1
#9	19	white	J6 out channel 0 bit 0
#10	20	black	J6 out channel 0 + Supply
#11	21	brown	J6 out channel 1 Ground
#12	22	red	J6 out channel 1 bit 7
#13	23	orange	J6 out channel 1 bit 6
#14	24	yellow	J6 out channel 1 bit 5
#15	25	green	J6 out channel 1 bit 4
#16	26	blue	J6 out channel 1 bit 3
#17	27	violet	J6 out channel 1 bit 2
#18	28	gray	J6 out channel 1 bit 1
#19	29	white	J6 out channel 1 bit 0
#20	30	black	J6 out channel 1 + Supply
#21	31	brown	J6 out channel 2 Ground
#22	32	red	J6 out channel 2 bit 7
#23	33	orange	J6 out channel 2 bit 6
#24	34	yellow	J6 out channel 2 bit 5
#25	35	green	J6 out channel 2 bit 4
#26	36	blue	J6 out channel 2 bit 3
#27	37	violet	J6 out channel 2 bit 2
#28	38	gray	J6 out channel 2 bit 1
#29	39	white	J6 out channel 2 bit 0
#30	40	black	J6 out channel 2 + Supply
#31	41	brown	J6 out channel 3 Ground
#32	42	red	J6 out channel 3 bit 7
#33	43	orange	J6 out channel 3 bit 6
#34	44	yellow	J6 out channel 3 bit 5
#35	45	green	J6 out channel 3 bit 4
#36	46	blue	J6 out channel 3 bit 3
#37	47	violet	J6 out channel 3 bit 2
#38	48	gray	J6 out channel 3 bit 1
#39	49	white	J6 out channel 3 bit 0
#40	50	black	J6 out channel 3 + Supply
black	51	brown	power supply ground
black	52	red	power supply ground
black	53	orange	power supply ground
black	54	yellow	power supply ground
black	55	green	power supply ground
red	56	blue	+ power supply input
red	57	violet	+ power supply input
red	58	gray	+ power supply input
red	59	white	+ power supply input
red	60	black	+ power supply input